# <sup>G A R</sup> PRIMA 1 TOUCH HIGH POWER



#### DESCRIPTION

A Prima One Touch High Power operates independently or as part of the Hogar Controls home automation system or with any certified Z-Wave home automation system. It allows you to schedule, control and adjust the brightness of Incandescent bulbs and phase-cut dimmable LED lights. The module provides the best-in-class smooth dimming output for LED loads.





HEAT, HUMIDITY AND SHOCK PROOF

CAPACITIVE

TOUCH SENSORS

SLEEK AND STYLISH DESIGN



N



Z-WAVE COMPATIBLE

ENERGY CONSERVATION



WITH VOICE AND APP

MULTIPLE CONTROLS WITH A SINGLE TOUCH

# SPECIFICATIONS


Model number	HTP-ISH-BXX-IN XX denotes color of Bezel and Glass plate
Gang box Size	2 Modular British Standard
Dimensions (L*W*B)	95*95*34.2 mm
Power Rating	110 – 240V AC, 50 Hz
Load Rating	2500W Resistive (Incandescent Bulbs) 150W Capacitive (LED Lights) 150W Inductive (Motors, Fan, hairdryer)
Weight	150g
Weight Operating Temperature	150g 32 °F to 104 °F or 0 °C to 40 °C
Operating Temperature	32 °F to 104 °F or 0 °C to 40 °C
Operating Temperature Storage Temperature	32 °F to 104 °F or 0 °C to 40 °C -4 °F to 158 °F or -20 °C to 70 °C
Operating Temperature Storage Temperature Humidity	32 °F to 104 °F or 0 °C to 40 °C -4 °F to 158 °F or -20 °C to 70 °C 0- 90%

# PRE-INSTALLATION MANDATORY CHECKS

- It is always advised to consult a certified electrician to perform the installation process.
- Ensure the Load capacity & Power requirements of your intended switch matches the technical specifications.
- Ensure you follow all national and local electrical codes for installation.
- TURN OFF the mains to make sure no power is running.
- Open the existing Wall Switch/Faceplate (if any). You may use a flathead screwdriver to open the switch gently.

#### INSTALLATION AND CONFIGURATION

- Open the frame of the Prima Touch panel.
- Refer to the line wiring diagram and connect the wires accordingly as Line In/Hot, Neutral, Load, and Earth Ground wires. Make sure the wires are properly screwed to avoid loose connections.

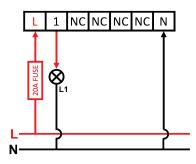

 Neatly push the wires into the gang box and gently screw the PCB box on the wall. Turn the Main **Power ON**, and the LED lights blinks blue.

#### CONFIGURATION TO Z-WAVE CONTROLLER

- Keep the device within Z-Wave range of Controller.
- Adding a switch: Set Controller in Add/Include mode. Touch and hold the panel button for 5 sec until all LEDs blink in blue color and the app displays "device found".
- **Removing a Switch:** Set the Controller in Remove/Exclude mode. Touch and hold the panel button for 5 seconds until all LEDs blink in blue color and in the app displays "device removed".
- **Factory Reset:** Press Config button continuously 5 times and all LEDs blink in RED color 4 times and then BLUE color 4 times indicating factory reset.
- Once the configuration is done, place the glass panel neatly over the PCB Box and gently push it to lock it over the switch.

# WARRANTY

Hogar provides limited warranty of 18 months on every Prima Touch Panel

#### ENQUIRY

For Orders/Details, kindly reach out to us at **info@hogarcontrols.com** or scan QR code.

