



RGBW **SMART MODULE SERIES** #SwitchToSmart



DESCRIPTION

Hogar RGBW is a universal, Z-Wave compatible RGBW controller that allows a user to create dynamic LED lighting experiences for buildings, art installations and events of all sizes. Complete your luxury home automation with versatile and energy-efficient lighting solutions and fascinate the world with modern lighting.













ZWAVE COMPATABILITY




SPECIFICATIONS

Model Number	HC-IM-RGB-IN
Power Requirement	12V DC
Dimensions	37x37x18.3mm (L*W*H)
Load Rating	150W at 12V input (Combination of 4 channels R, G, B, W)
Operating Temperature	32°F - 104°F or 0°C - 40°C
Humidity	0-90%
Storage	-4°F to 158°F or 20°C to 70°C
Wireless Specifications	
Wireless Range	50m Outdoor - 20m Indoor
Radio Protocol	Z-Wave Plus
Radio Signal Power	lm
Radio Frequency	EU - 868.40/869.40 MHz IN - 865.20 MHz BR/AU - 919.80/ 921.40 MHz US - 908.40/ 916/ 908.49 MHz
Number Of Output/Channel	
RGB Outputs	Four

PRE INSTALLATION MANDATORY CHECKS

- It is always advised to consult a certified electrician to perform the installation process.
- Ensure the Load capacity & Power requirements of your intended switch matches the technical specifications.
- · Ensure you follow all national and local electrical codes for installa-

INSTALLATION

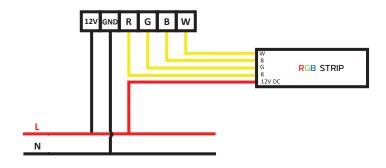

CONFIGURATION TO ZWAVE CONTROLLER

- 1. Set the controller into inclusion mode (Refer controller's manual for instructions)
- 2. Turn ON the mains.
- 3. Press and Hold config button for 5-7 seconds till LED blinks BLUE & then release.
- 4. On successful addition of the device, the controller sends a confirmation.

WARRANTY

Hogar Provides Limited Warranty of 18 months on every product.

ENQUIRY

For Orders/Details, kindly reach out to us at info@hogarcontrols.com



Scan QR code for more details on warranty and sales enquiries