



TEMP & HUMIDITY

SMART SENSOR SERIES #SmartSense

Works Well With:
Google Assistant
🔿 amazon alexa

DESCRIPTION

The Temp & Humidity Sensor enables you to detect & show the REAL-TIME changes in the temperature & humidity in the area installed & then lets you automate & trigger multiple other smart devices connected to your Hogar SE Gateway & App.







TEMPERATURE ALERT

ZIGBEE COMPATABILITY





APP CONTROL



VOICE CONTROL

SPECIFICATIONS

Model No.	HSE-THS-001
Battery Type	CR2450
Static Current	<= 35 µA
Dimensions	61.8 x 60 x 13.5 mm
Operating Temperature	–10 °C – +55 °C
Humidity	0 - 95%
Wireless Protocol	ZigBee 3.0
Transmit Frequency	2.4000 - 2.4835 GHz
Temperature Detecting Range	-9.9 °C - +5.5 °C
Humidity Detecting Range	0 - 99%

INSTALLATION

- Remove the bracket's 3M Tape.
- Stick the bracket on the rear side of your Sensor and then place it on your preferred spot to check the temperature & humidity variations



ADDING TEMP & HUMIDITY SENSOR TO YOUR HOME

- Open the Hogar SE App and go to "Rooms".
- Click on "+" Button and select "Temperature & Humidity Sensor". Follow the prompts on your APP for subsequent steps.
- Open the back cover of your Temp & Humidity Sensor by turning the clasp position as shown below & remove the battery insulation strip.
- To POWER ON the Temp & Humidity Sensor, Press and Hold the button for 5 seconds.



- · You will soon see the SIGNAL icon on the display screen of Temp & Humidity Sensor flashing that indicates it has entered into Enrolling Mode.
- · Click "Confirm Indicator Rapidly Blink" on your Hogar SE App.



· Your Temperature & Humidity Sensor is now successfully added to your Hogar SE App.

WARRANTY

Hogar Provides Limited Warranty of 18 months on every product.

ENQUIRY

For Orders/Details, kindly reach out to us at info@hogarcontrols.com



Scan QR code for more details on warranty and sales enquiries